

Tri-City Retail Systems Inc.
**Epson Windows Advanced Printer Driver
Installation Guide**
v.304E

Installing the Epson Windows Advanced Printer Driver Application (EPSON304E.zip)

Close any antivirus programs that may be currently running as they could interfere with installation.

Create a new folder on your C:\ drive called **C:\Installed Software**


Create a new folder in your new **C:\Installed Software** folder called **C:\Installed Software\EPSON Windows**

Unzip all files from the **EPSON304E.zip** file into your new **C:\Installed Software\EPSON Windows** folder


Double-click on the ATM_301dE.exe application to begin the installation. If any Windows security warnings appear, give Windows permission to run the install program. Accept the term of the license agreement when asked and extract the install files to the default directory used by the installer.

When the installer begins, you will be asked to select your current Windows version and install language.


Important: Windows Vista users must select the Windows 2000 install

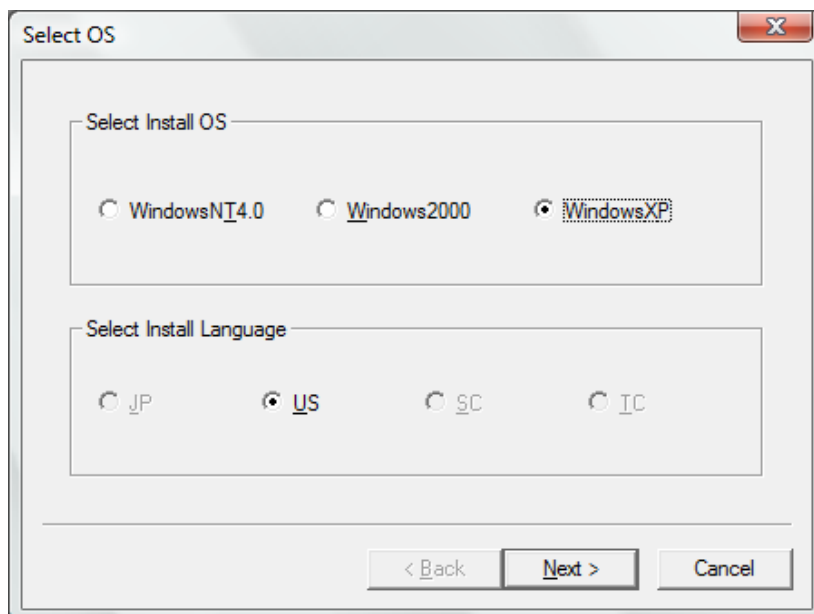

In the **Select Install Module** screen, place a checkmark in the EPSON TM-T88IV Receipt checkbox. Click on the **Printer Port Settings** button at the bottom of the window.

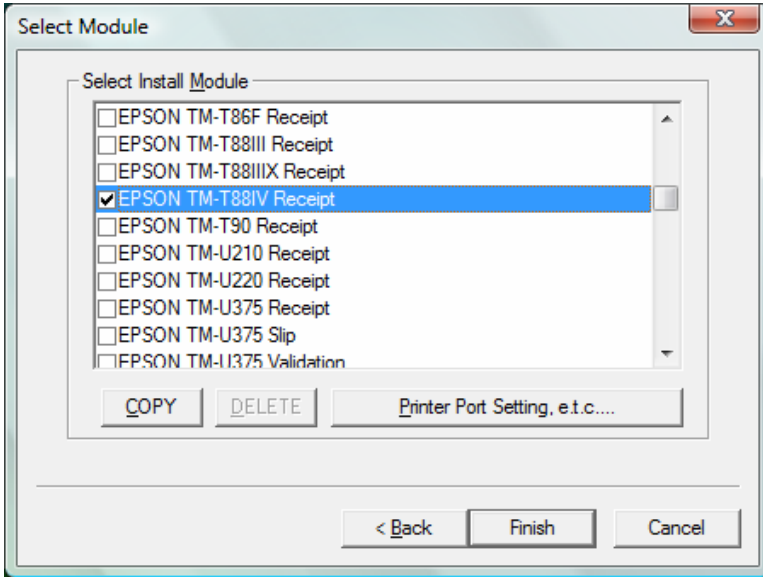

Click on the **Set Default** option and change the printer name to read **EPSON**. Click on the Port Type that matches your printer connection type

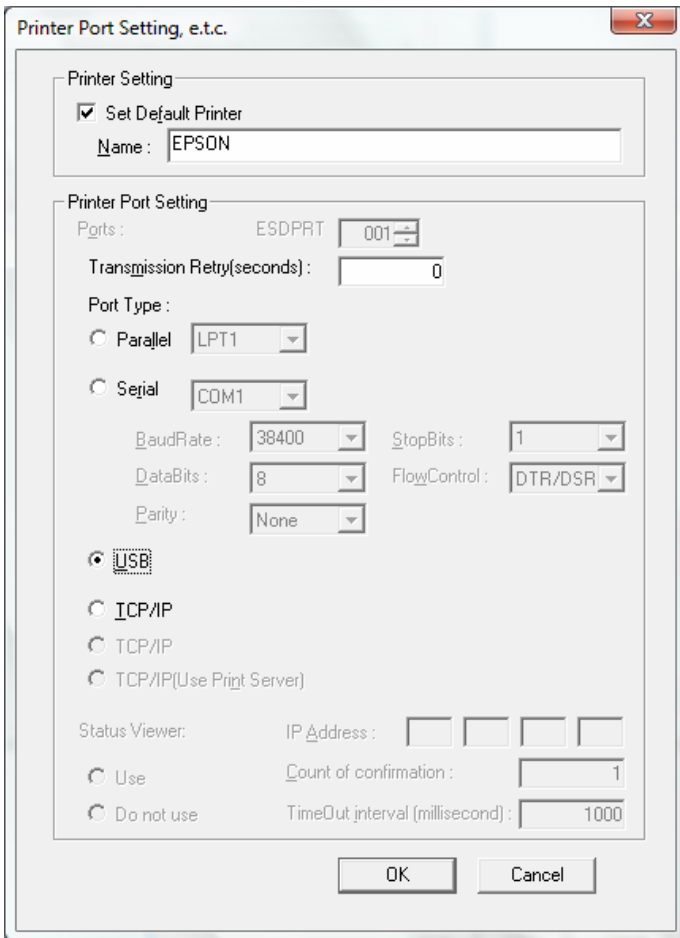


Click OK to be returned to the Select Install Module scheme. Click Finish to complete the installation. Click OK on any English language warnings that may appear. Restart your computer when asked by the installer.

Configure the Windows Print Driver after Restart

From your Windows Control Panel choose Printers and Faxes (called Printers in Vista)



Locate and highlight your newly installed printer. Either right click on the icon and choose Properties or click File and then Properties from the top menu; your screen will look similar to the one below. Click on the Printing Preferences button near the bottom of the window.

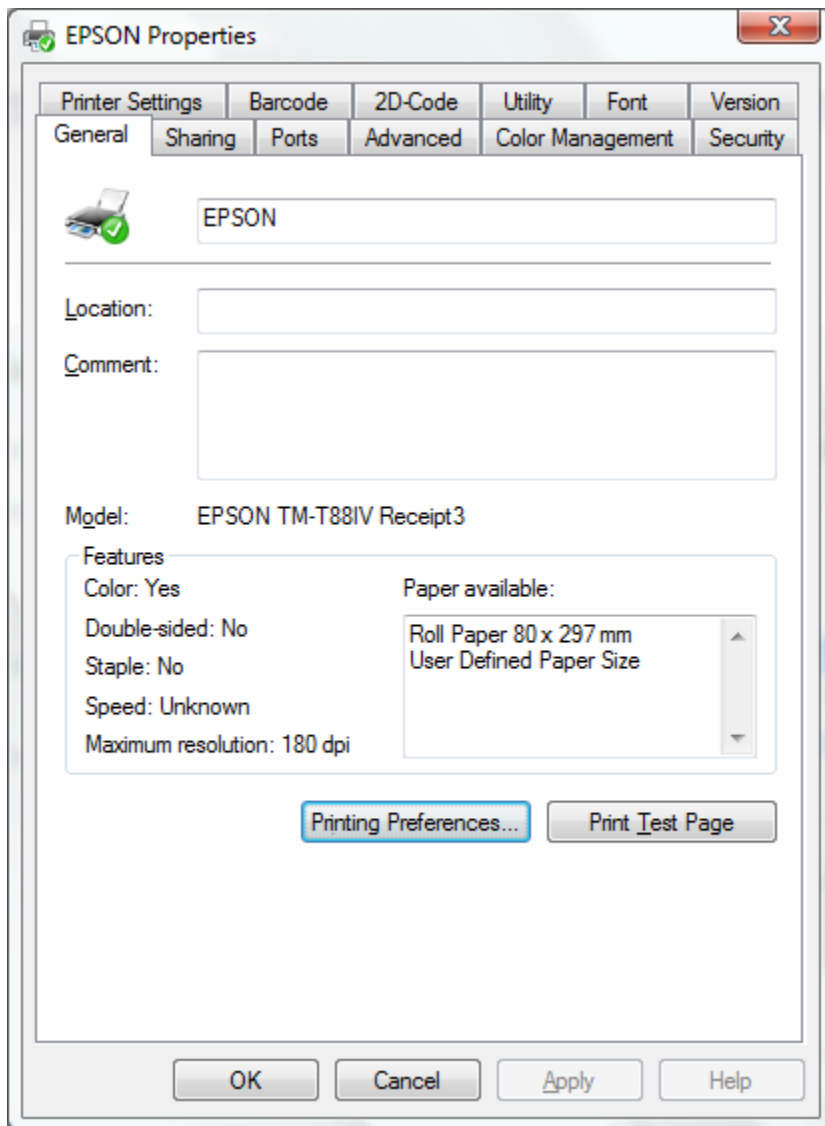



Configuring Cash Drawer and Paper Cut Operations

Once in the Printing Preferences screen, click the Operation tab at the top-right of the window.

After clicking on the Operation tab, click on the **Start of Document** button

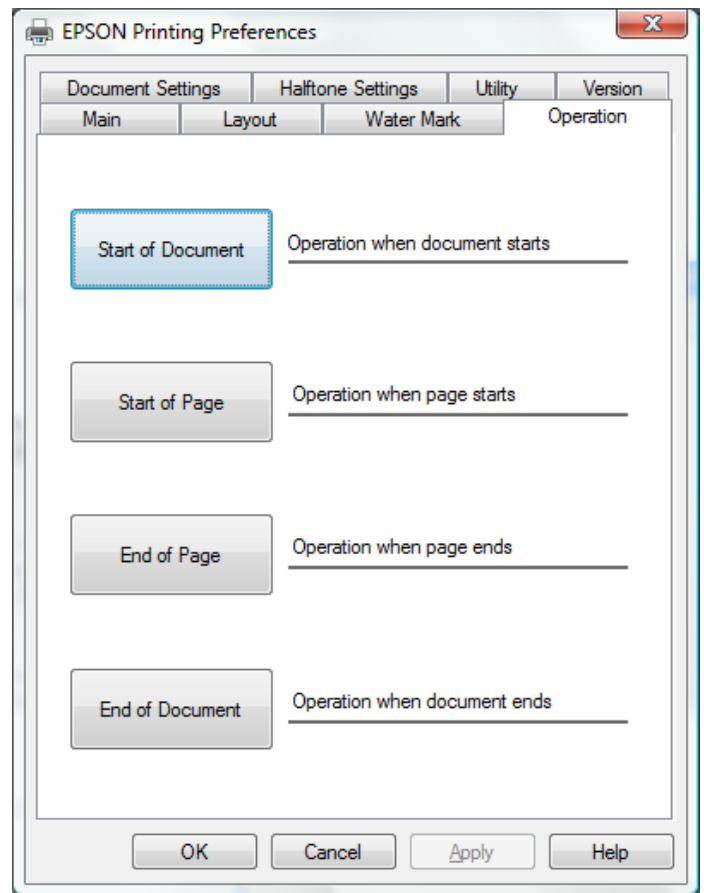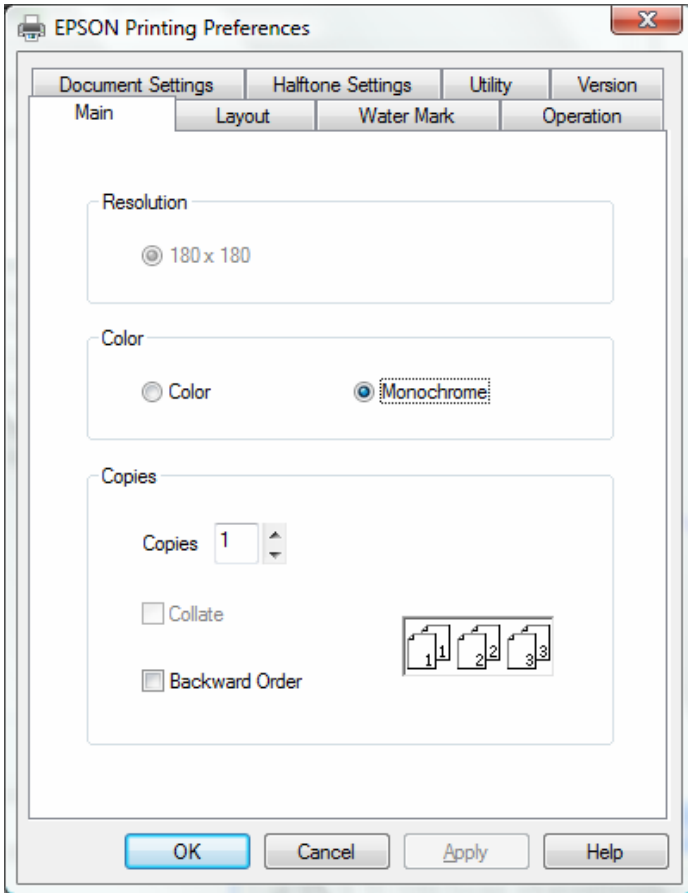


In the **Start of Document** settings, click on the Open Drawer drop-down and select **Open Drawer 1**. Click the OK button to save your changes.

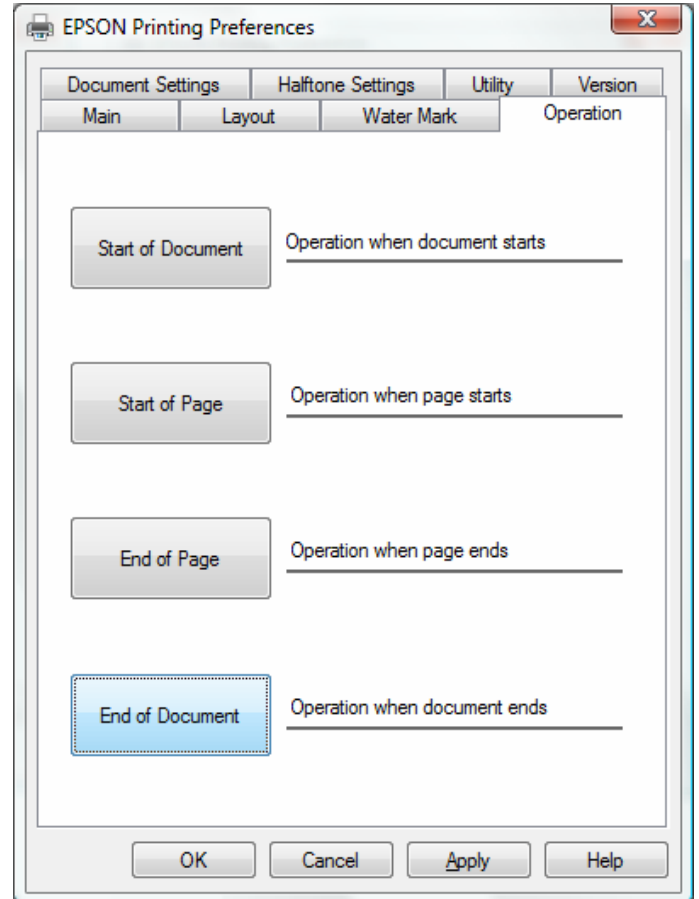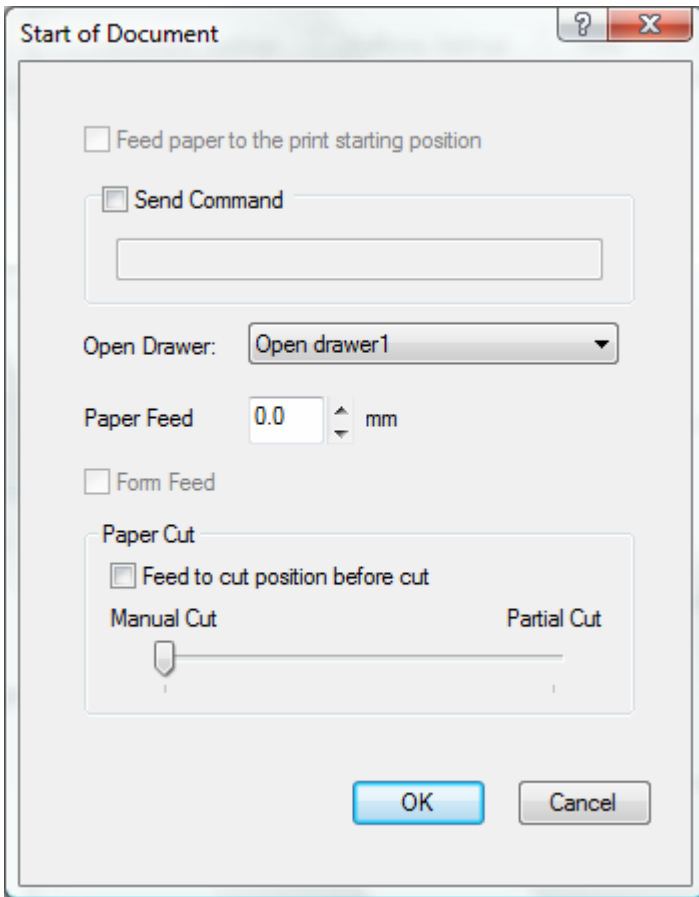

Now click on the **End of Document** button


Verify that your End of Document settings match the settings shown below.

The **Feed to Cut Position Before Cut** checkbox should be checked and the option arrow below should be positioned all the way to the right, directly under the **Partial Cut** option.

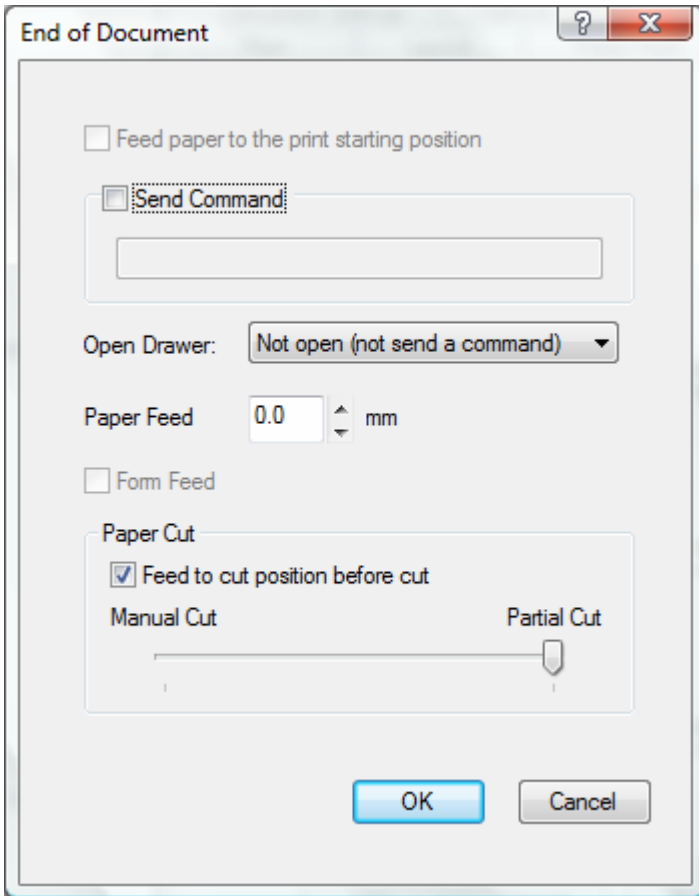

Click the OK button and then click the OK button again when sent back to the Epson Printing Preferences Operation window. This will close the Operation window.

You will be returned to the main printer properties window. Click the **Advanced** tab and then click on the **Printing Defaults** button at the bottom of the window.

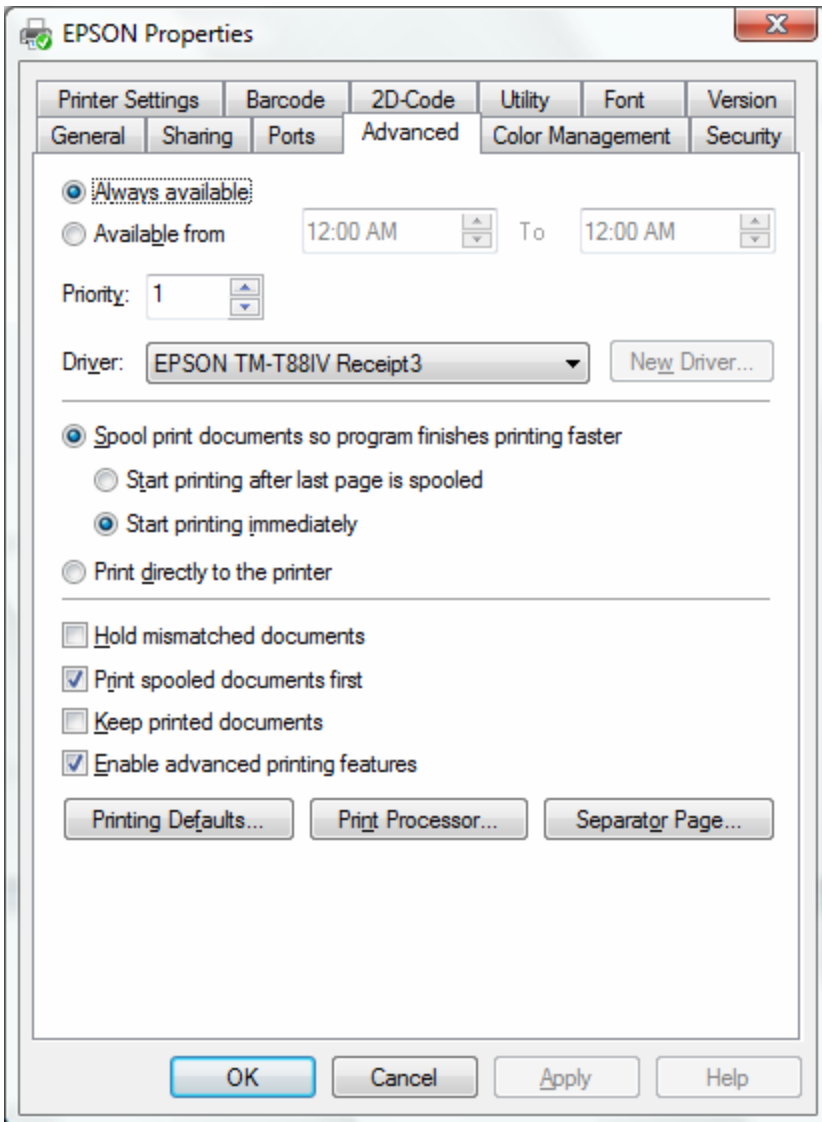

You will be sent to the Printing Defaults settings window. Please follow the same **Configuring Cash Drawer and Paper Cut Operations** instructions in this guide found on page 4.

After your Operations settings have been configured and you are returned back to the main Epson Printer Properties window, click on the General tab. Click on the Print Test Page button to ensure that your printer is both printing and opening the cash drawer.